

AI 031

S-DIAS AC Current Measuring Module

Publisher: SIGMATEK GmbH & Co KG
A-5112 Lamprechtshausen
Tel.: +43/6274/4321
Fax: +43/6274/4321-18
Email: office@sigmatek.at
WWW.SIGMATEK-AUTOMATION.COM

Copyright © 2018
SIGMATEK GmbH & Co KG

Translation from German

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.

S-DIAS AC Current Measuring Module

AI 031

3 analog current inputs 0-5 A AC

The S-DIAS AI 031 AC current measuring module is used to measure current in a 220-600 V network. To decouple from the supply, an external transformer must be used, which converts the measured current to a maximum of 5 A AC.



Contents

1 **Technical Data 3**

 1.1 **Analog Current Input Specifications 3**

 1.1.1 Current Measurement Input Step Response 3

 1.1.2 Current Measurement Input Amplitude Frequency Curve 4

 1.2 **Electrical Requirements..... 4**

 1.3 **Miscellaneous 7**

 1.4 **Environmental Conditions..... 7**

2 **Mechanical Dimensions 8**

3 **Connector Layout 9**

 3.1 **Status LEDs..... 10**

 3.2 **Applicable Connectors..... 10**

 3.3 **Label Field 11**

4 **Wiring.....12**

 4.1 **Wiring Example..... 12**

 4.2 **Note..... 13**

5 **Mounting.....14**


6 **Addressing.....16**

1 Technical Data


1.1 Analog Current Input Specifications

Number of channels	3	
Measurement range	0-5 A AC	
Measurement value	0-5000 Digits	
Measuring process	average value	
Signal form	Sine	
Frequency	50 Hz	
Resolution	12-bit (ca. 1.53 mA AC/Digit)	
Conversion time per channel	1 ms	
Common mode range	± 10 V	
Input filter hardware	typically 2 Hz	low pass 3rd order system
Resistive sensor	12 m Ω	
Measurement precision	± 1 % of maximum measurement value	

1.1.1 Current Measurement Input Step Response

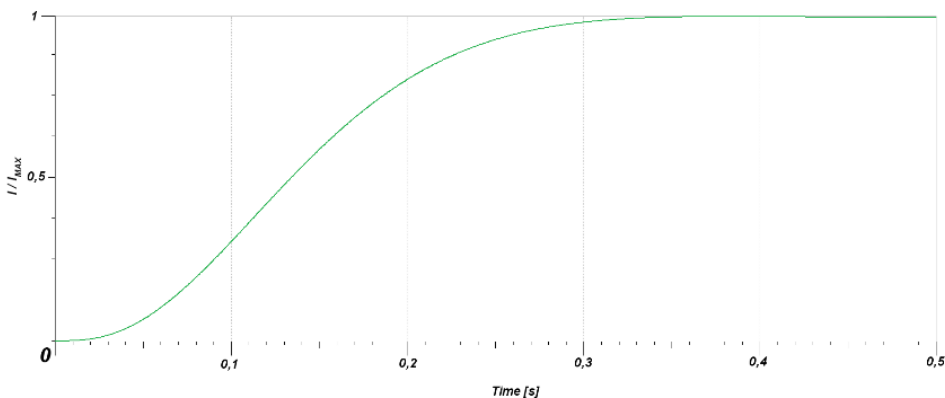

1.1.2 Current Measurement Input Amplitude Frequency Curve

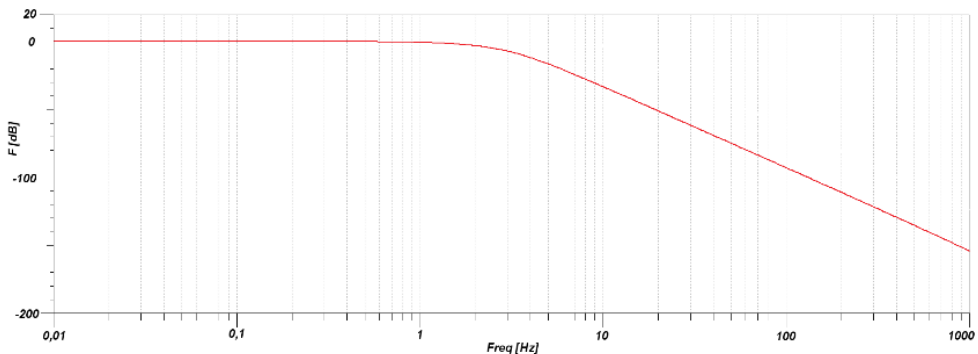

1.2 Electrical Requirements

Voltage supply from S-DIAS bus	+5 V	
Current consumption on the S-DIAS bus (+5 V power supply)	typically 50 mA	maximum 55 mA
Voltage supply from S-DIAS bus	+24 V	
Current consumption on the S-DIAS bus (+24 V power supply)	typically 40 mA	maximum 50 mA

If this S-DIAS module is connected to an S-DIAS supply module with several S-DIAS modules, the total current of the modules used must be determined and checked.

**The total current of the +24 V supply cannot exceed 1.6 A!
The total current of the +5 V supply cannot exceed 1.6 A!**


The specifications for the current can be found in the module-specific technical documentation under "Electrical Requirements".

Si ce module S-DIAS est connecté à un module d'alimentation S-DIAS suivi de plusieurs modules S-DIAS, le courant total des modules utilisés doit être déterminé et vérifié.

Le courant total de l'alimentation +24 V ne peut pas dépasser 1,6 A!

Le courant total de l'alimentation +5 V ne peut pas dépasser 1,6 A!

Le cahier des charges pour le courant peut être trouvé dans la documentation spécifique au module sous "Spécifications électriques".

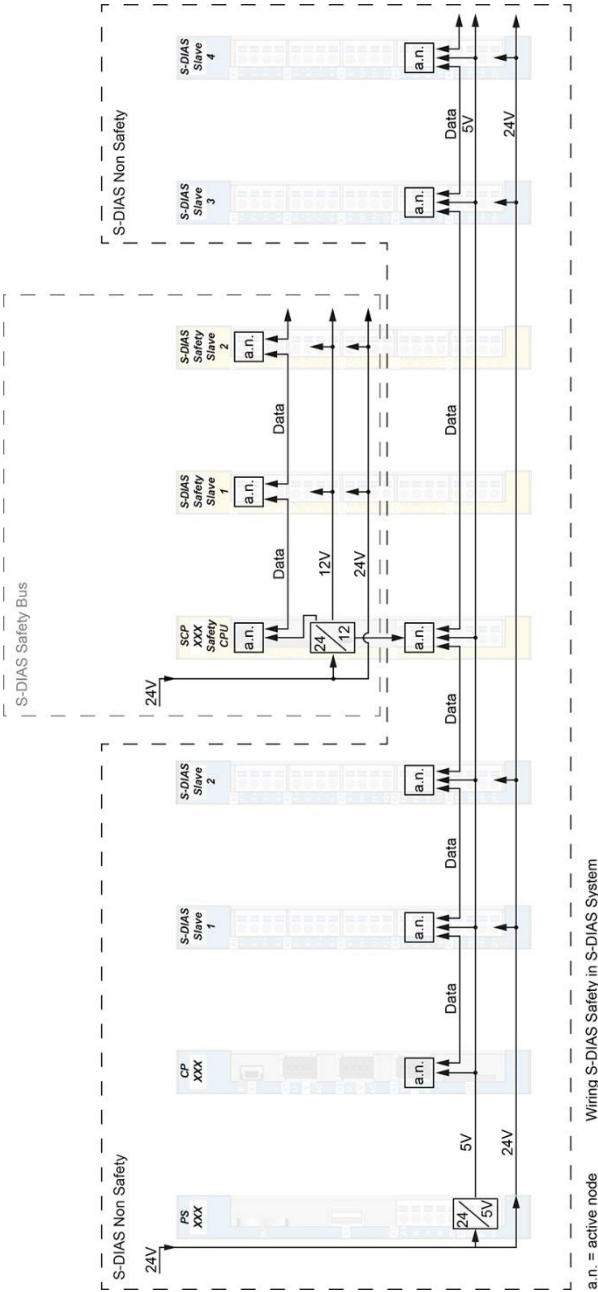


1.3 Miscellaneous

Article number	20-009-031
Hardware version	1.x
Standard	UL in preparation
Approvals	UL, cUL, CE in preparation


1.4 Environmental Conditions

Storage temperature	-20 ... +85 °C	
Environmental temperature	0 ... +60 °C	
Humidity	0-95 %, non-condensing	
Operating conditions	pollution degree 2 indoor areas only Altitude up to 2000 m	
EMC resistance	in accordance with EN 61000-6-2 (industrial area)	
EMC noise generation	in accordance with EN 61000-6-4 (industrial area)	
Vibration resistance	EN 60068-2-6	3.5 mm from 5-8.4 Hz 1 g from 8.4-150 Hz
Shock resistance	EN 60068-2-27	15 g
Protection type	EN 60529	IP20

2 Mechanical Dimensions

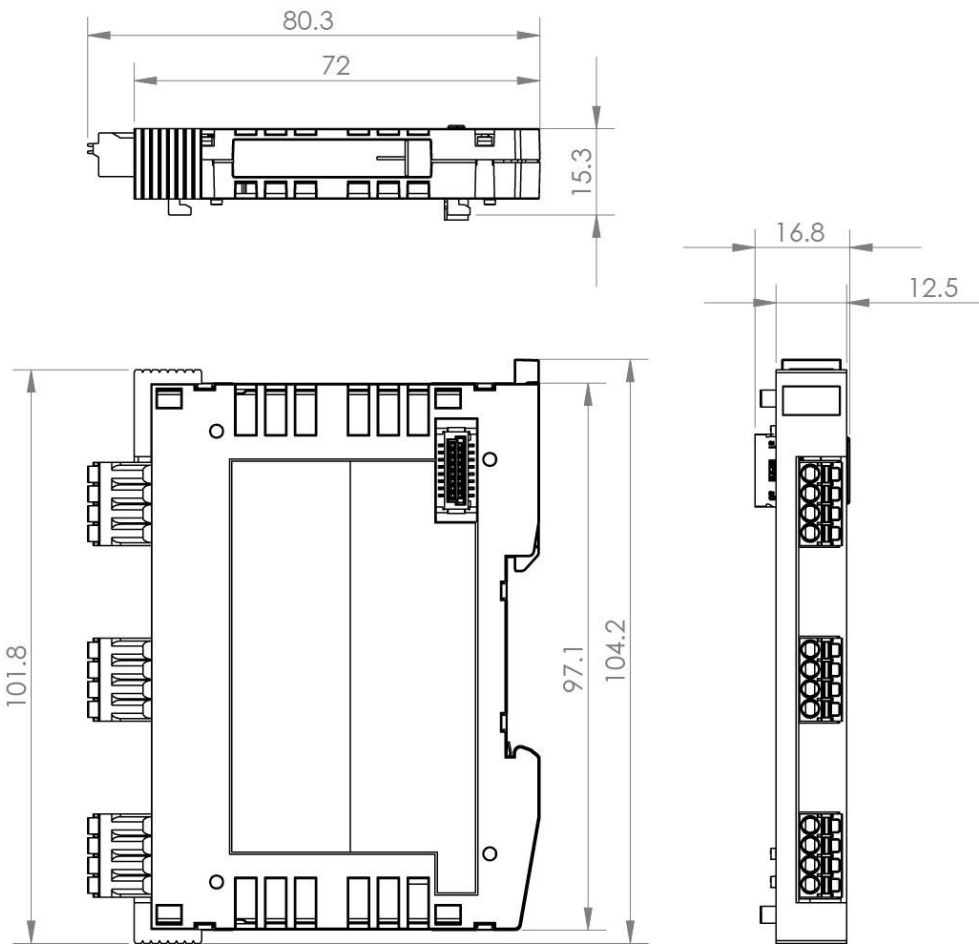

3 Connector Layout

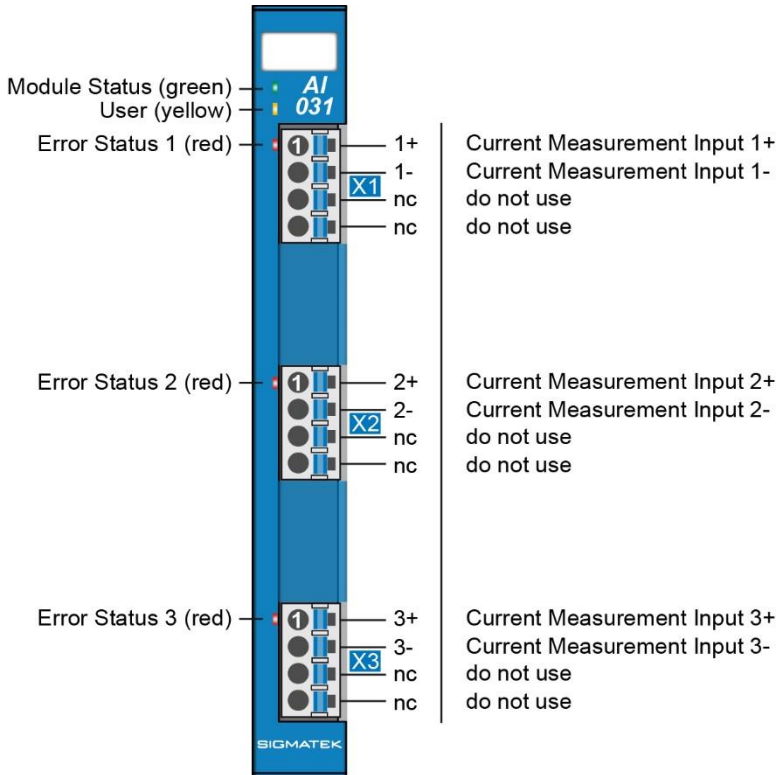

3.1 Status LEDs

Module Status	green	ON	module active
		OFF	no supply available
		BLINKING (5 Hz)	no communication
User	yellow	ON	can be set from the application
		OFF	(e.g. the module LED can be set to blinking through the visualization so that the module is easily found in the control cabinet)
		BLINKING (2 Hz)	
		BLINKING (4 Hz)	
Error Status 1-3	red	BLINKING (5 Hz)	status 1-3: Over current channel 1 to channel 3 ($I > 5 \text{ A AC}$)

3.2 Applicable Connectors


Connectors:

X1-X3: Connectors with spring terminals (included in delivery)


The spring terminals are suited for the connection of ultrasonically compacted (ultrasonically welded) stranded wire.

Connections:

Stripping length/sleeve length.	10 mm
Mating direction:	parallel to the conductor axis or circuit board
Conductor cross section rigid:	0.2-1.5 mm ²
Conductor cross section flexible:	0.2-1.5 mm ²
conductor cross section strands ultrasonically compacted:	0.2-1.5 mm ²
Conductor cross section AWG/kcmil:	24-16
Conductor cross section flexible with ferrule:	0.25-1.5 mm ²
Conductor cross section flexible with ferrule and plastic sleeve:	0.25-0.75 mm ² (reason for reduction d2 of the ferrule)

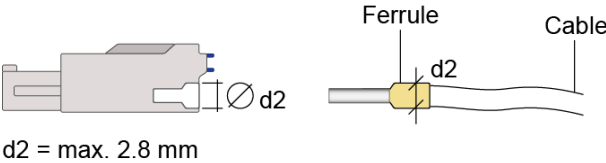


3.3 Label Field

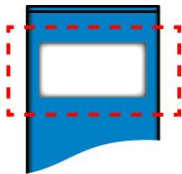

Manufacturer	Weidmüller
Type	MF 10/5 CABUR MC NE WS
Article number Weidmüller	1854510000
Compatible printer	Weidmüller
Type	Printjet Advanced 230V
Article number Weidmüller	1324380000

4 Wiring

4.1 Wiring Example

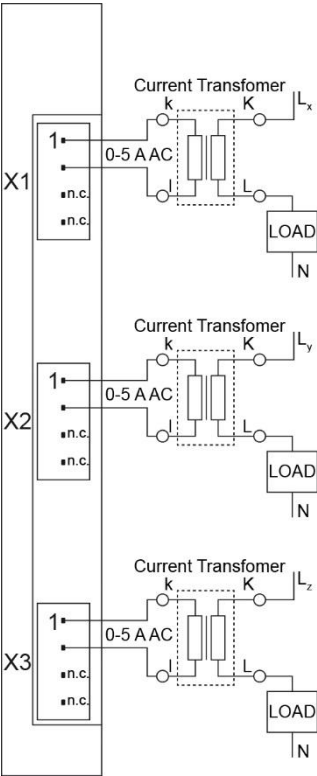

4.2 Note

The signals recorded by the analog modules are very small, as compared to the digital signals. To ensure error-free operation, a careful wiring method must be followed:

- The DIN rail must have an adequate mass connection.
- The lines connected to the source of the analog signals must be as short as possible and parallel wiring to digital signal lines must be avoided.
- The signal lines must be shielded.
- The shielding must be connected to a shielding bus.
- Avoid parallel connections between input lines and load-bearing circuits.
- Protective circuits for all relays (RC networks or free-wheeling diodes).


The ground bus should be connected to the control cabinet when possible!

IMPORTANT:


The S-DIAS module CANNOT be connected/disconnected while voltage is applied!

5 Mounting

The S-DIAS modules are designed for installation into the control cabinet. To mount the modules a DIN-rail is required. The DIN rail must establish a conductive connection with the back wall of the control cabinet. The individual S-DIAS modules are mounted on the DIN rail as a block and secured with latches. The modules must be mounted horizontally (module label up) with sufficient clearance between the ventilation slots of the S-DIAS module blocks and nearby components and/or the control cabinet wall. This is necessary for optimal cooling and air circulation, so that proper function up to the maximum ambient temperature is ensured.

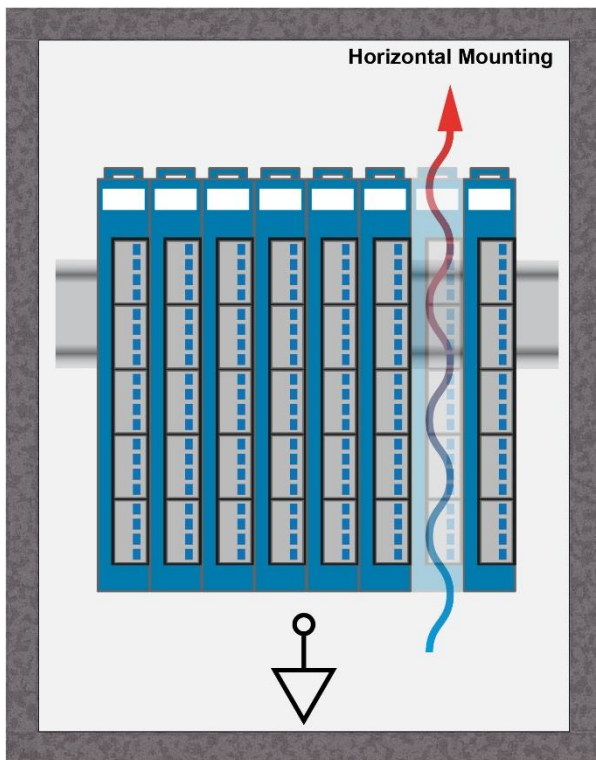

Recommended minimum distances of the S-DIAS modules to the surrounding components or control cabinet wall:

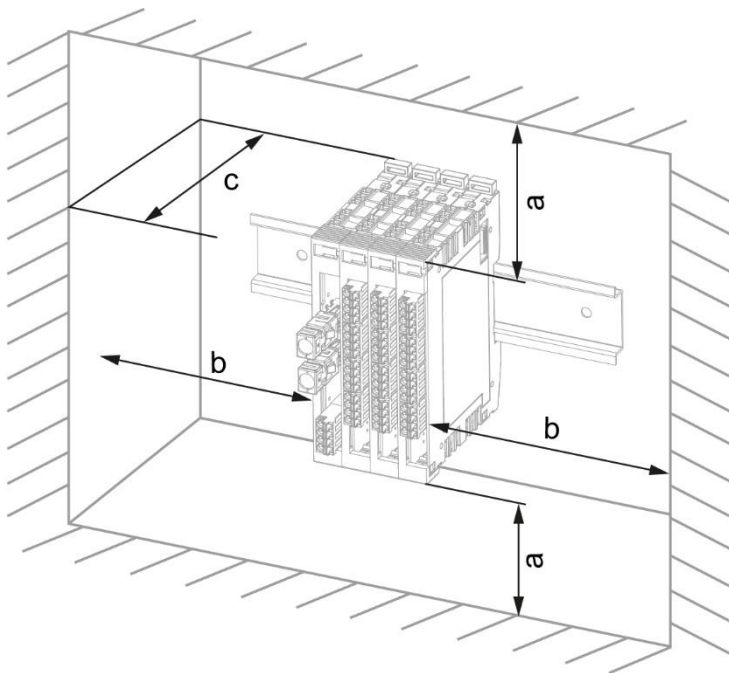

a	b	c
30 mm (1.18")	30 mm (1.18")	100 mm (3.94")

a, b, c ... distances in mm (inches)

6 Addressing

Address (hex)	Size (bytes)	Access Type	Description
0000	128	w	Cyclic Data for Firmware
0000	2	w	-
0080	128	r	Cyclic Data for the HW class

0080	2	r	Status Bit 0 24 V DC not OK Indicates whether the supply voltage is OK. (0 = OK, 1 = not OK) Bit 1 not synchronized Indicates whether Sync messages were received from the client. At the latest, this bit is set after 127 ms if no Sync was received. This bit is reset after 2 equally long Sync intervals (= by 3rd Sync). (0 = OK, 1 = not OK) Bit 2 FLASH calibration data checksum error Indicates whether the FLASH data are stored correctly Check using CRC checksum. The check is run during the system start. (0 = OK, 1 = not OK) Bit 3 RAM calibration data checksum error Indicates whether the RAM data are stored correctly Check using CRC checksum. The check is run cyclically every 10 minutes (0 = OK, 1 = not OK) Bit 4 invalid calibration data Check whether the FW version is compatible with the configuration (version check). The check is run during the system start. (0 = OK, 1 = not OK) Bit 5 S-DIAS cyclic time not supported The S-DIAS bus time setting (in the master) is not supported by this module. (0 = OK, 1 = not OK) Bit 6 toggle bit (inverted by the FW with each write process) Inverted each cycle to indicate the change in the PDO data. The control can hereby detect whether the module is still operable 0 => 1 ... Data are updated: OK 1 => 0 ... Data are updated: OK 0 => 0 ... Data are updated: not OK 1 => 1 ... Data are updated: not OK
------	---	---	--

			Module-Specific: Bit 7-8 reserved (always 0) Other: Bit 9-11 reserved (always 0) Error information Bit 12-15 Error codes 00 no errors occurred 01 periphery could not be initialized 02 System clock could not be initialized 03-14 reserved 15 undefined error occurred
0082	2	r	Analog input 1
0084	2	r	Analog input 2
0086	2	r	Analog input 3
0088	1	r	Cable break / short-circuit detection Bit 0 ... reserved (always 0) Bit 1 ... over current AI1 Bit 2 ... reserved (always 0) Bit 3 ... over current AI2 Bit 4 ... reserved (always 0) Bit 5 ... over current AI3 Bit 6-15 ... reserved
0100	128	w	Firmware Configuration Data
0100	2	w	Checksum over the entire configuration data
0102	2	w	Length of the configuration data
0104	1	w	Info (special cases or status bits) Bit 0 raw value mode 0 ... normal mode (in and output values compared) 1 ... raw values are used and provided Bit 1-7 reserved
0105	1	w	Message Counter

0180	128	r	HW Class Configuration Data
0180	2	r	Checksum over the entire configuration data
0182	2	r	Length of the configuration data
0184	2	r	Firmware version
0186	1	r	Message Counter
0187	1	r	Reserved

Documentation Changes

Change date	Affected page(s)	Chapter	Note

